Connector Views

39. C103 Junction Connector (L4)

– Gray
– Lower center rear of engine
– On engine wire harness

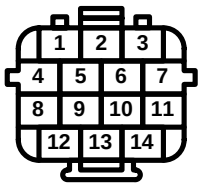

1	YEL/BLK (To fuel injector)
2	YEL/BLK (To fuel injector)
3	YEL/BLK (To fuel injector)
4	YEL/BLK (To fuel injector)
5	YEL/BLK (To IAC valve)
6	YEL/BLK (Fuel supply system)
7	YEL/BLK (Switch ignition input)

8	BRN/BLK (G101)
9	BRN/BLK (G101)
10	BLK (G101)
11	BLK (G101)

12	GRN/BLK (Circuit Z28)
13	GRN/BLK (Circuit Z28)
14	GRN/BLK (Circuit Z28)

Terminals grouped together are connected by the same bus bar.

©2002 American Honda Motor Co., Inc.